

# FORD

Model	Start Year	End Year	Blade Length	
			Driver	Passenger
AEROMAX, AEROVIEW	96	98	20	20
AEROMAX	89	95	18	18
F SERIES	00	05	20	20
F SERIES	98	99	22	22
(L) F SERIES	94	97	18	18
(E) -80F SERIES	94	94	18	18
F SERIES	67	79	15	15
F SERIES	61	66	13	13
F SERIES	48	60	12	12
L SERIES (LOUISVILLE)	98	98	20	20
L SERIES (EXCEPT LN,LTL)	96	97	20	20
LN,LTL SERIES	96	97	18	18
L SERIES (LOUISVILLE)	70	95	18	18
N,T SERIES	60	69	13	13
P SERIES (PARCEL DEL.)	49	66	16	16
CARGO	86	98	26	26
CL-9000 SERIES	78	92	22	22
C SERIES (SINGLE ARM)	61	87	18	18
C SERIES (DOUBLE ARM)	61	89	16	16
H-950, H-1000	61	65	16	16
LCF	06	06	21	21
W SERIES	74	77	19	19
W SERIES	65	73	20	20