

INTERNATRIONAL / NAVISTAR

Model	Start Year	End Year	Blade Length	
			Driver	Passenger
CXT	05	05	22	22
FLEETSTAR A	72	78	14	14
FLEETSTAR D	69	74	12	12
LOADSTAR	63	78	12	12
METRO	67	70	18	18
METRO II	87	89	20	20
MXT	05	05	22	22
PAYSTAR	82	86	16	16
PAYSTAR	78	81	16	16
PAYSTAR	74	77	16	16
"R" LINE CABS	67	70	12	12
RXT	05	05	22	22
S1600 THRU S8300	91	91	14	14
S1600 THRU S2600	73	88	14	14
TRANSTAR4200,4300,5000	82	86	16	16
TRANSTAR 4300	78	81	16	16
TRANSTAR 4270, 4370	74	77	16	16
TRANSTAR 4200,4300	71	73	16	16
TRANSTAR DC-400	68	72	20	20
TRANSTAR DCF-400	68	72	20	20
2000 SERIES	93	99	16	16
2000 SERIES	90	92	14	14
4200,4300, 4400	05	05	22	22
4600,4700,4800,4900 SER.	93	01	16	16
4600,4700,4800,4900 SER.	90	92	14	14
5500i,5600i,5900i (1PC.)	99	06	22	22
5500i,5600i,5900i (2 PC.)	99	06	18	18
5000 SERIES	94	98	16	16
5000 SERIES	87	93	16	16
7000 SERIES	90	91	14	14
7.30074E+11	05	06	22	22
76007700	05	06	22	22
7300, 7400, 7500, 7600	02	04	22	22
8100, 8200, 8300 SERIES	93	00	16	16
8100, 8200, 8300 SERIES	89	92	14	14
8300 SERIES	87	88	14	14
85008600	02	05	22	22
9100i (1 PC)	99	03	22	22
9100i (2 PC)	99	03	18	18
9100	98	98	16	16
9200i (1 PC.)	99	05	22	22
9200i (2 PC.)	99	05	18	18
9200	94	98	16	16
9200	84	93	16	16
9300	94	98	16	16
9300	84	93	16	16
9400i (1 PC.)	99	05	22	22
9400i (2 PC.)	99	05	18	18

9400	94	98	16	16
9400	84	93	16	16
9900i, 9900ix (1 pc.)	99	05	22	22
9900i, 9900ix (2 pc.)	99	05	18	18
9900	98	98	16	16
CARGOSTAR	70	84	16	16
CF500, CF6000 D.S.	04	05	20	20
CF500, CF6000 P.S.	04	05	21	21
CO-190	71	72	18	18
CO-9670 (XL SERIES)	81	86	20	20
LOADSTAR	63	71	16	16
SUPER TRANSTAR	70	74	20	20
TRANSTAR II (CO-4070)	78	81	20	20
TRANSTAR II (CO-4070)	70	77	20	20
TRANSTAR 400	68	72	20	20
UNISTAR	70	74	20	20
400 THRU 900 SERIES	89	91	19	19
9600, 9700 SERIES	87	95	20	20
9800	65	99	20	20