

ISUZU

Model	Start Year	End Year	Blade Length	
			Driver	Passenger
EVR	96	93	20	20
FTR, FVR, FXR	05	05	22	22
FRR, FSR, FTR, FVR	97	04	22	22
FRR, FSR, FTR, FVR	86	96	20	20
NPR, NRR	95	05	20	20
NPR, NRR	96	95	19	19